

Multifunction Meter

SELEC[®]
Creating Best Value



MFM384

OPERATING INSTRUCTIONS

Operating / 1008 / MFM384 / Ver1A, OP278-V01A.

**ABOUT MFM384**

A suitable meter for the measurement of parameters such as voltage, current, power factor, frequency, power and energy. Features such as pulse output, communication are available thereby providing a complete solution for many measurement needs.

APPLICATIONS:**1. Electric Automation SCADA System:**

MFM384 can be used as Remote Terminal Unit (RTU) for monitoring purpose in a SCADA System. All measured data is available through RS485 communication ports with the Modbus Protocol.

2. Energy Management System / Building Management System:

MFM384 can be used to monitor power and energy parameters of an organization which can be transmitted to main control room through RS485

3. Heavy Industries:

MFM384 is a suitable meter for heavy industries because of its ability to function even in rough conditions.

4. Power Transmission and Distribution field**5. Power System Protection Field****6. Industry Automation****7. Large UPS System**

Note: Please read this manual carefully & completely before installing / operating MFM384.

Specifications subject to change as development is a continuous process

Overview

**SALIENT FEATURES**

- 4 lines, 4 digits per line, 8 digits for energy
- Bar graph for current indication
- Network supported: 1 Ø 2 wire, 2 Ø 3 wire, 3 Ø 3 wire, 3 Ø 4 wire
- User programmable network selection
- LCD with backlight
- User programmable ON time for backlight
- Auto / manual page scrolling
- User programmable page sequence for page displayed in auto mode
- Measures all electrical parameters (RMS Voltage, Current, Active power, Reactive power, Apparent power, Power factor, Frequency, Active energy, Reactive energy & Apparent energy, DMD (Min / Max Active Power, Min / Max Reactive Power, Max Apparent power))
- Programmable CT/ PT primary, CT/PT secondary
- Memory retention for ten years
- Potential free Pulse output for energy
- 85 to 270V AC auxiliary supply
- RS485 communication (MODBUS Protocol), (Optional)
- Protection covering for terminal screws

ORDER CODE

- MFM384
- MFM384-C (with Communication)

Overview

Display & Key description



1. Bargraph
Display current in bargraph format
2. 4 lines of seven segment digits in metering area
Display parameters such as voltage, Current, Power factor, Power & Frequency
3. Unit (V, A, PF, Hz, kW, kVA, kVAh)
Indicates unit of parameter displayed

Voltage: V, kV		Current: A
Active Power: kW, MW		Reactive power: kVA, MVA
Apparent power: kVA, MVA		Frequency: Hz,
Active energy: kWh, MWh		Reactive energy: kVAh, MVAh
Apparent energy: kVAh, MVAh		Demand: DMD
4. Integration of energy: Energy accumulation indication
5. Keypad: keypad with six dual function keys (HMI or Programming)
6. Energy: 8 dedicated digits for energy (Active, Reactive & Apparent)
7. Backlight: Backlight LCD display (ON/OFF time programable, auto ON on key press)
8. Phase (1, 2, 3, 1-2, 2-3, 3-1) : Display phase to neutral or phase to phase values
9. Demand : Maximum & Minimum demand of power



Technical Overview

Functional Descriptions

Description	MFM384
Display	<ul style="list-style-type: none"> ▶ Liquid crystal display with backlight ▶ 4 lines, 4 digits per line to show electrical parameters ▶ 5th line, 8 digits to show energy ▶ Bar graph for current indication
LCD Indications	<ul style="list-style-type: none"> ▶  :Integration of energy ▶ PRG : Unit is in configuration menu ▶  : This symbol indicates communication is in progress ▶ DMD: Maximum Demand for Power
Display update time	▶ 1 sec for all parameters
Display Scrolling	Auto / Manual
Online Pages	Customized page selection from available standard pages (selection via configuration menu)

Input Point Electrical Specification

Electrical input type	1 Ø 2 wire, 2 Ø 3 wire, 3 Ø 3 wire, 3 Ø 4 wire
Rated input voltage	11 to 300V AC max phase to neutral 19 to 519V AC max phase to phase
Rated input current	Nominal 5A AC (11mA minimum) 6A max
Frequency range	45 to 65 Hz
CT Primary	1A or 5A to 10,000A (Programmable for any value) Note: 1A to 10,000A if CT secondary is 1 else CT primary is 5A to 10,000A
CT Secondary	Programmable 1A or 5A
PT Primary	100V to 500kV (Programmable for any value)
PT Secondary	100 to 500V AC (L-L) Programmable for any value
Burden	0.5 VA per phase @ 5A

Serial Communication [Applicable for MFM384-C / MFM384-C-230V]

Interface standard & protocol	MODBUS RTU protocol over RS485
Communication address	1 to 255
Transmission mode	Half duplex
Data types	Float and Integer
Transmission distance	500 m maximum
Transmission speed	300, 600,1200, 2400, 4800, 9600,19200 (in bps)
Parity	None, Odd, Even
Stop bits	1 or 2
Response time	100 ms (Independent of baud rate)

Pulse Output

Pulse Output (type)	Opto-Isolated
Pulse Voltage	24V DC max.
Pulse Current	100mA max.
Pulse Width	100 ms \pm 50 ms.

General Specification

Auxiliary Supply	85 to 270V AC/DC
Operating frequency	50/60Hz
Power Consumption	0.5 VA max. @5A per phase
Temperature	Operating temperature: 0 to +50°C Storage temperature: -20 to +75°C
Humidity	95% (non condensing)
Mounting	Panel mounting
Weight	MFM384 / MFM384-C : 318gms MFM384-230V / MFM384-C-230V : 362gms

Parameter Measured / Calculated		
Parameters	Measured values	Unit
Voltage	All average and phase to phase and phase to neutral voltage	V
Current	All phases and average current	A
Active Power	kW ₁ , kW ₂ , kW ₃ and Total kW	kW
Reactive Power	kVAr ₁ , kVAr ₂ , kVAr ₃ and Total kVAr	kVAr
Apparent Power	kVA ₁ , kVA ₂ , kVA ₃ and Total kVA	kVA
Power Factor	Individual and average	-
Frequency	Frequency of available phase	Hz
Active Energy	Total of all phases	kWh
Reactive Energy	Total of all phases	kVArh
Apparent Energy	Total of all phases	kVAh
DMD	Maximum & Minimum demand of power	P, Q, S

Resolution Table		
PT Ratio x CT Ratio	kWh/ kVAh/ kVArh	Pulse
<15	0.01K	0.01K
<150	0.1K	0.1K
<1500	1K	1K
<15000	0.01M	0.01M
<150000	0.1M	0.1M
≥1500000	1M	1M

NOTE:

- 1) For voltage, Current, Power, resolution is automatically adjusted
- 2) For power factor, resolution is 0.001
- 3) INT blinks after every 5 seconds, if load is connected on any one of 3 phase

Accuracy :	
Measurement	Accuracy
Voltage V_{L-N}	$\pm 0.5\%$ of Full scale
Voltage V_{L-L}	$\pm 0.5\%$ of Full scale
Average Voltage V_{L-N}	$\pm 0.5\%$ of Full scale
Average Voltage V_{L-L}	$\pm 0.5\%$ of Full scale
Current	$\pm 0.5\%$ of Full scale
Average current	$\pm 0.5\%$ of Full scale
Frequency	$\pm 0.1\%$ For Voltage $>20V$ L-N, For Voltage $>35V$ L-L
Active Power	Class 1
Apparent power	Class 1
Reactive Power	Class 1
Power factor and Avg Power Factor	± 0.01
Active energy	Class 1
Reactive energy	Class 1
Apparent energy	Class 1
MAX / MIN Active Power	1%
MAX / MIN Reactive Power	1%
MAX Apparent Power	1%

Toll free: 1800 227 353

Phone: 91-22-28471 1882 / 4039 4200 / 4039 4202

Email: sales@selec.com

Installation Guide

Safety Precautions

All safety related codifications, symbols and instructions that appear in this operating manual or on the equipment must be strictly followed to ensure the safety of the operating personnel as well as the instrument.


If the equipment is not handled in a manner specified by the manufacturer it might impair the protection provided by the equipment.

 **CAUTION:** Read complete instructions prior to installation and operation of the unit.

 **CAUTION:** Risk of electric shock.

WIRING GUIDELINES

 **WARNING:**

1. To prevent the risk of electric shock power supply to the equipment must be kept OFF while doing the wiring arrangement.
2. Wiring shall be done strictly according to the terminal layout. Confirm that all connections are correct.
3. Use lugged terminals.
4. To eliminate electromagnetic interference use of wires with adequate ratings and twists of the same in equal size shall be made.
5. Cable used for connection to power source, must have a cross section of 1.5mm^2 . These wires shall have current carrying capacity of 6A.
6. The following safety earth symbol is used in this user's manual 

Maintenance

1. The equipment should be cleaned regularly to avoid blockage of ventilating parts.
2. Clean the equipment with a clean soft cloth. Do not use Isopropyl alcohol or any other cleaning agent.

Installation Guidelines

CAUTION:

1. This equipment, being built-in-type, normally becomes a part of main control panel and in such case, the terminals do not remain accessible to the end user after installation and internal wiring.
2. Conductors must not come in contact with the internal circuitry of the equipment or else it may lead to a safety hazard that may in turn endanger life or cause electrical shock to the operator.
3. Circuit breaker or mains switch must be installed between power source and supply terminals to facilitate power 'ON' or 'OFF' function. However this switch or breaker must be installed in a convenient position normally accessible to the operator.
4. Before disconnecting the secondary of the external current transformer from the equipment, make sure that the current transformer is short circuited to avoid risk of electrical shock and injury.


CAUTION:

1. The equipment shall not be installed in environmental conditions other than those mentioned in this manual.
2. The equipment does not have a built-in-type fuse. Installation of external fuse of rating 275V AC/0.5Amp for electrical circuitry is highly recommended.

Mechanical Installation

For installing the controller

1. Prepare the panel cutout with proper dimensions as shown. Tolerance of cutout $\pm 0.5\text{mm}$.

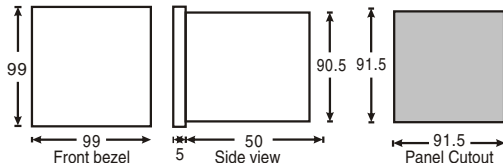

2. Push the meter into the panel cutout. Secure the meter in its place by pushing the clamp on the rear side. The screws, of the pane of the clamp, must be in the farthest forward slot.
3. For proper sealing, tighten the screws evenly with required torque.
4. Recommended conductor cross section = 1.5mm^2
Terminal screw tightening torque = $0.5\text{ N}\cdot\text{m}$
Screw clamp tightening torque = $0.1\text{ N}\cdot\text{m}$

⚠ CAUTION:

The equipment in its installed state must not come in close proximity to any heating sources, caustic vapors, oils, steam, or other unwanted process by-products.

EMC Guidelines**EMC Guidelines:**

1. Use proper input power cables with shortest connections and twisted type.
2. Layout of connecting cables shall be away from any internal EMI source.


? SERVICE DETAILS

This device contains no user serviceable parts and requires special equipment and specialized engineers for repair.



NO WARRANTY ON UNIT DAMAGED DUE TO WRONG INPUT / OUTPUT WIRING CONNECTION.

Terminal Diagram

MFM384 / MFM384-230V

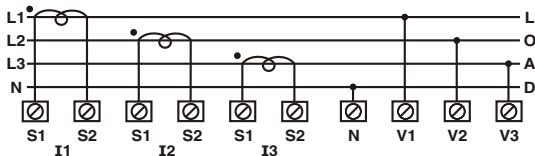

MFM384-C / MFM384-C-230V

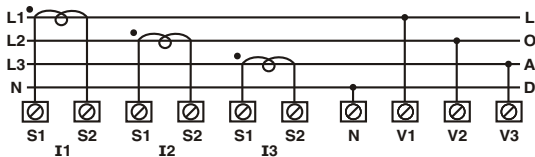


Wiring guide

3 PHASE 4-WIRE (COMMONLY USED) WIRING DIAGRAM


3 \emptyset - 4 wire, 3 CT's

All fuse types: 0.5A class CC UL type
0.5A fast acting 600V

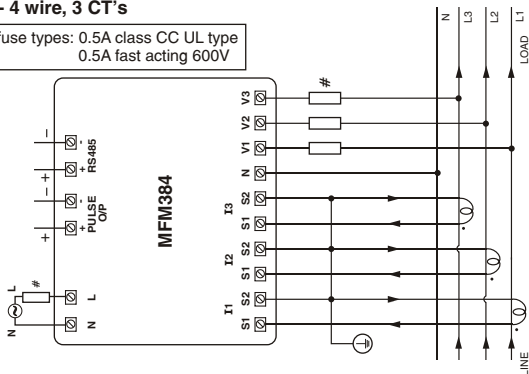

3 \emptyset - 4 wire, 3 CT's & 3 PT's


All fuse types: 0.5A class CC UL type
0.5A fast acting 600V

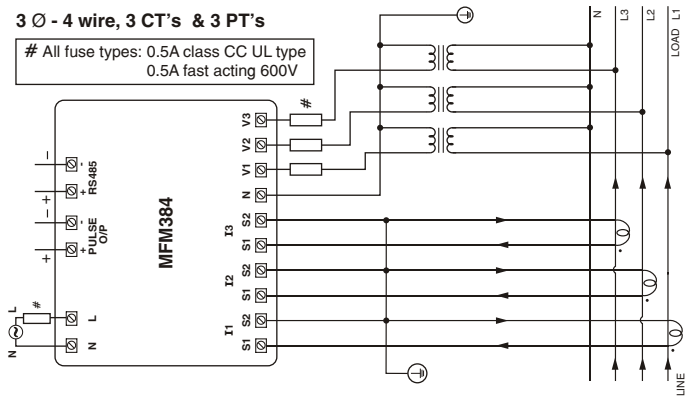

Wiring Guide


3 PHASE 3-WIRE WIRING DIAGRAM 3 Ø - 3 wire, 2 CT's & 2 PT's

All fuse types: 0.5A class CC UL type
0.5A fast acting 600V

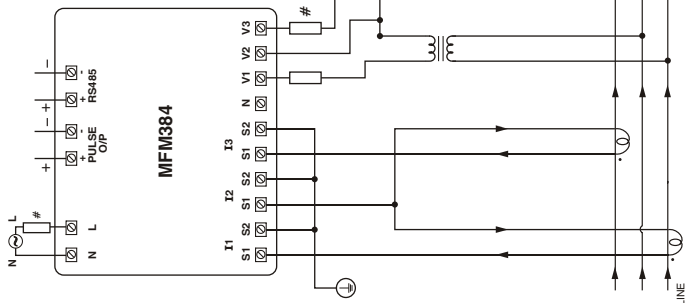

3 Ø - 3 WIRE, 2 CT'S


All fuse types: 0.5A class CC UL type
0.5A fast acting 600V

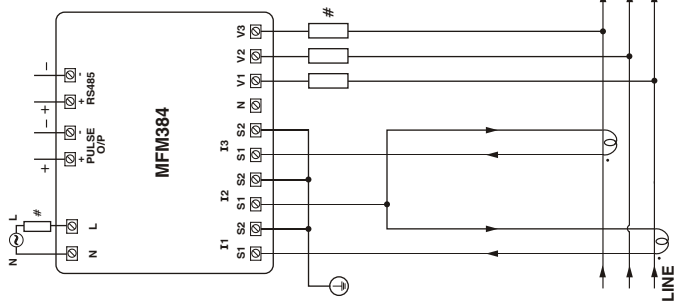

Wiring Guide


2 PHASE 3-WIRE WIRING DIAGRAM 2 Ø - 3 wire, 2 CT's

All fuse types: 0.5A class CC UL type
0.5A fast acting 600V

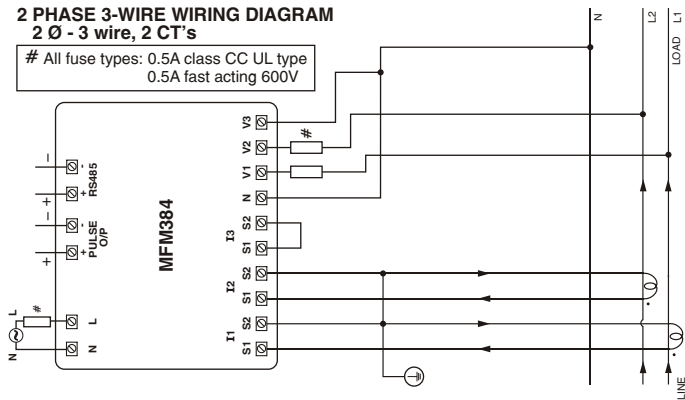

2 Ø - 3 wire, 2 CT's & 2 PT's

All fuse types: 0.5A class CC UL type
0.5A fast acting 600V

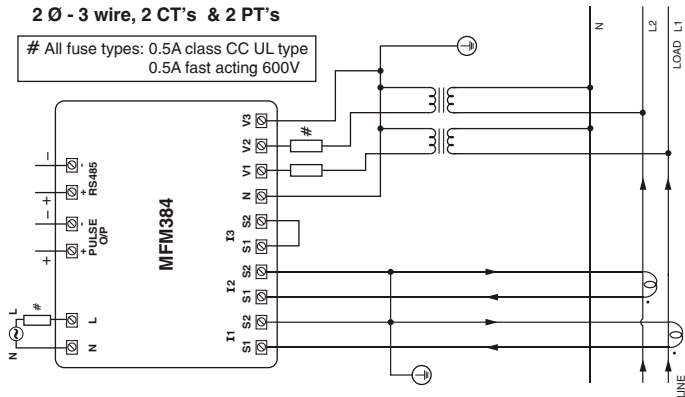


Wiring Guide


1 PHASE 2-WIRE (COMMONLY USED) WIRING DIAGRAM

1 Ø - 2 wire, 1 CT

All fuse types: 0.5A class CC UL type
0.5A fast acting 600V

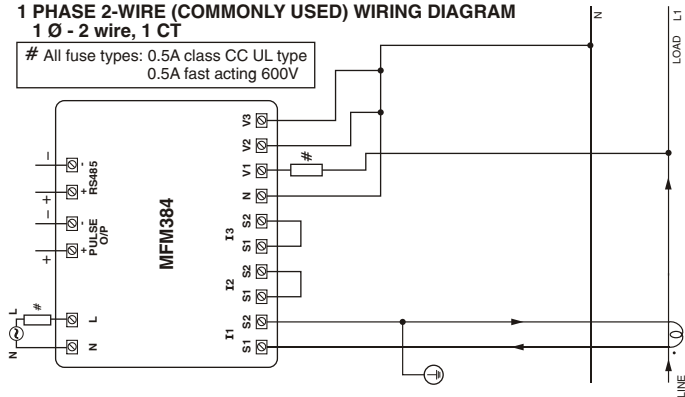

COMMUNICATION WIRING DIAGRAM

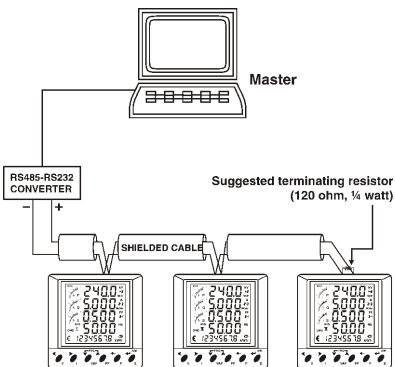


Online Page Description

There are 6 dedicated keys labelled as V, I, VAF, PF, P, E. Use these 6 keys to read meter parameters. Simply press these keys to read the parameters.

01

X1

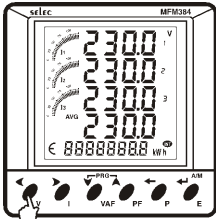


Press V (◀) button, the first screen shows:

- ✓ L-N Voltage and Average Voltage (V1, V2, V3 & V_{AVG})
- ✓ Bargraph indicates amount of % current present in the system (Independent of key press)
- ✓ The lower most display shows total energy (kWh, kVAh, kVAh), based on user selection

02

X2

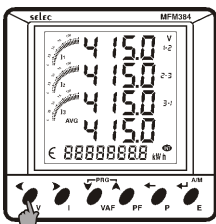


Press V (◀) button, the second screen shows:

- ✓ L-L voltage & average L-L voltage (V 1-2, V 2-3, V 3-1, V_{AVG})
- ✓ Bargraph indicates amount of % current present in the system (Independent of key press)
- ✓ The lower most display shows total energy (kWh, kVAh, kVAh), based on user selection

Note: In 3 Ø 3 wire system only L-L voltage & average L-L voltage (V 1-2, V 2-3, V 3-1, V_{AVG}) will be displayed

03

X1

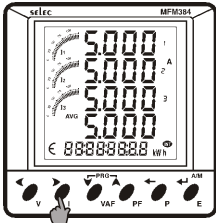

Press I (▶) button, the first screen shows:


- ✓ Current (I1, I2, I3) & average current (I_{AVG})
- ✓ Bargraph indicates amount of % current present in the system (Independent of key press)
- ✓ The lower most display shows total energy (kWh, kVAh, kVAh), based on user selection

Note: In 3 Ø 3 wire system L-L current & average L-L current (I 1-2, I 2-3, I 3-1, I_{AVG}) will be displayed

Online Page Description

04

X1

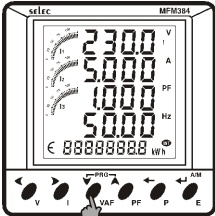


Press VAF (♥) button, the first screen shows:

- ✓ Voltage (L-N), Current, Power factor of first phase (V1, I1, PF1) & Frequency (Hz)
- ✓ Bargraph indicates amount of % current present in the system (Independent of key press)
- ✓ The lower most display shows total energy (kWh, kVAh, kVAh), based on user selection

05

X2

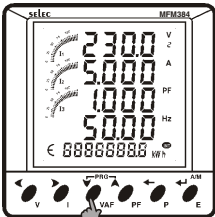


Press VAF (♥) button, the second screen shows:

- ✓ Voltage (L-N), Current, Power factor of second phase (V2, I2, PF2) & Frequency (Hz)
- ✓ Bargraph indicates amount of % current present in the system (Independent of key press)
- ✓ The lower most display shows total energy (kWh, kVAh, kVAh), based on user selection

06

X3

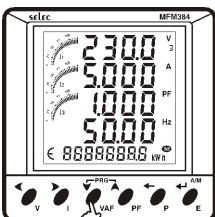


Press VAF (♥) button, the third screen shows:

- ✓ Voltage (L-N), Current, Power factor of third phase (V3, I3, PF3) & Frequency (Hz)
- ✓ Bargraph indicates amount of % current present in the system (Independent of key press)
- ✓ The lower most display shows total energy (kWh, kVAh, kVAh), based on user selection


Online Page Description

07

X4

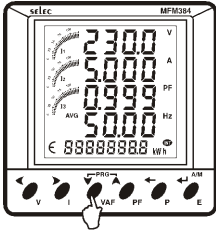


Press VAF (▼) button, the fourth screen shows:

- ✓ Average Voltage (L-N), Current, Power factor of three phase (V_{AVG} , I_{AVG} , PF_{AVG}) & Frequency (Hz)
- ✓ Bargraph indicates amount of % current present in the system (Independent of key press)
- ✓ The lower most display shows total energy (kWh, kVAh, kVAh), based on user selection

Note: In 3 Ø 3 wire system only L-L / AVG voltage, L-L / AVG current, Average PF & Frequency will be displayed

08

X1

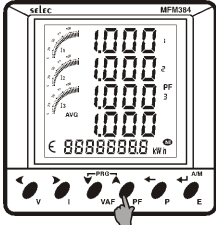


Press PF (▲) button, the first screen shows:

- ✓ Power factor of each phase (PF1, PF2, PF3) & average power factor (PF_{AVG})
- ✓ Bargraph indicates amount of % current present in the system (Independent of key press)
- ✓ The lower most display shows total energy (kWh, kVAh, kVAh), based on user selection

Note: In 3 Ø 3 wire system only average power factor will be displayed

09

X1

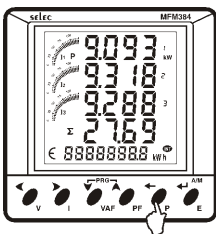

Press P (←) button, the first screen shows:


- ✓ Active power of each phase (P1, P2, P3) & total power (P_{SUM})
- ✓ Bargraph indicates amount of % current present in the system (Independent of key press)
- ✓ The lower most display shows total energy (kWh, kVAh, kVAh), based on user selection

Note: For 3 Ø 3 wire system, this page will not be available.

Online Page Description

10

X2

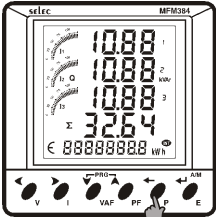


Press P (←) button, the second screen shows:

- ✓ Reactive power of each phase (Q1, Q2, Q3) & total power (Q_{SUM})
- ✓ Bargraph indicates amount of % current present in the system (Independent of key press)
- ✓ The lower most display shows total energy (kWh, kVArh, kVAh), based on user selection

Note: For 3 Ø 3 wire system, this page will not be available.

11

X3

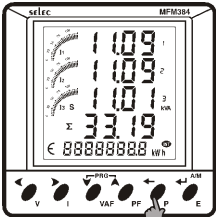


Press P (←) button, the third screen shows:

- ✓ Apparent power of each phase (S1, S2, S3) & total apparent power (S_{SUM})
- ✓ Bargraph indicates amount of % current present in the system (Independent of key press)
- ✓ The lower most display shows total energy (kWh, kVArh, kVAh), based on user selection

Note: For 3 Ø 3 wire system, this page will not be available.

12

X4

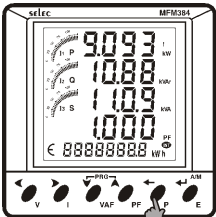

Press P (←) button, the fourth screen shows:


- ✓ Active, Reactive, Apparent power of first phase (kW1, kVA1, kVA1) & power factor
- ✓ Bargraph indicates amount of % current present in the system (Independent of key press)
- ✓ The lower most display shows total energy (kWh, kVArh, kVAh), based on user selection

Note: For 3 Ø 3 wire system, this page will not be available.


Online Page Description

13

X5

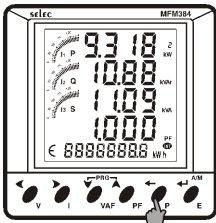


Press P (←) button, the fifth screen shows:

- ✓ Active, Reactive, Apparent power of second phase (kW2, kVAr2, kVA2) & power factor
- ✓ Bargraph indicates amount of % current present in the system (Independent of key press)
- ✓ The lower most display shows total energy (kWh, kVArh, kVAh), based on user selection

Note: For 3 Ø 3 wire system, this page will not be available.

14

X6

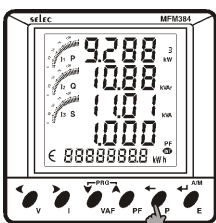


Press P (←) button, the sixth screen shows:

- ✓ Active, Reactive, Apparent power of third phase (kW3, kVAr3, kVA3) & power factor
- ✓ Bargraph indicates amount of % current present in the system (Independent of key press)
- ✓ The lower most display shows total energy (kWh, kVArh, kVAh), based on user selection

Note: For 3 Ø 3 wire system, this page will not be available.

15

X7

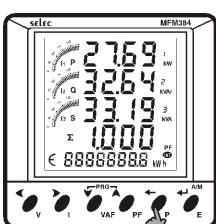

Press P (←) button, the seventh screen shows:


- ✓ Total Active, Reactive, Apparent power of all three phase (kW_{SUM1}, kVAr_{SUM1}, kVA_{SUM1}) & power factor
- ✓ Bargraph indicates amount of % current present in the system (Independent of key press)
- ✓ The lower most display shows total energy (kWh, kVArh, kVAh), based on user selection

Note: In 3 Ø 3 wire system only total L-L power (kW, kVAr, kVA) will be displayed

Online Page Description

16

X8

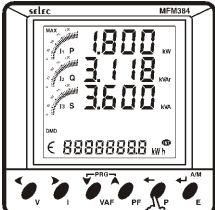


Press P (←) button, the eighth screen shows:

- [Max Active, Reactive, Apparent demand Power (kW, kVAr, kVA)
- [Bargraph indicates amount of % current present in the system (Independent of key press)
- [The lower most display shows total energy (kWh, kVArh, kVAh), based on user selection

Note: In 3 Ø 3 wire system only L-L max demand power (kW, kVAr, kVA) will be displayed

17

X9

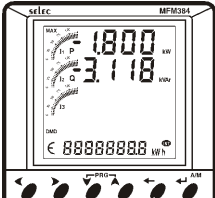


Press P (←) button, the ninth screen shows:

- [Min Active, Reactive demand power (kW, kVAr)
- [Bargraph indicates amount of % current present in the system (Independent of key press)
- [The lower most display shows total energy (kWh, kVArh, kVAh), based on user selection

Note: In 3 Ø 3 wire system only L-L min demand power (kW, kVAr, kVA) will be displayed

X1

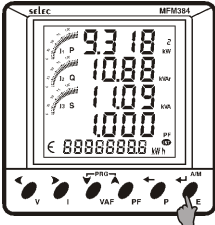


Press E (←) button, the first screen shows:

- ✓ Total active energy on the bottom most display, Irrespective of page being displayed
- ✓ Bargraph indicates amount of % current present in the system (Independent of key press)

Note: User can toggle between the 3 types of energy parameters (kWh, kVArh, kVAh) irrespective of page being displayed, by pressing E button


Online Page Description


X2

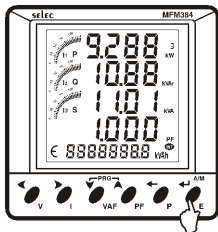

Press E (←) button, the second screen shows:

- ✓ Total apparent energy on the bottom most display, Irrespective of page being displayed
- ✓ Bargraph indicates amount of % current present in the system (Independent of key press)


X3

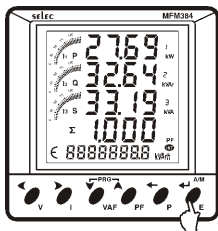

Press E (←) button, the third screen shows:

- ✓ Total reactive energy on the bottom most display, Irrespective of page being displayed
- ✓ Bargraph indicates amount of % current present in the system (Independent of key press)

A/M

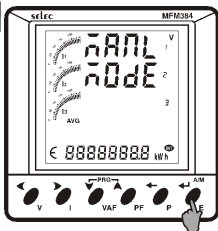

Press E (←) button for 3 seconds to toggle between Auto & Manual mode.

Note: By default unit operates in auto mode.

In auto mode online pages scrolls automatically at the rate of 5 seconds per page.

In auto mode when any key is pressed, unit temporarily switches to manual mode and the appropriate page is displayed, also if no key is pressed for 5 sec, unit resumes auto mode




Configuration

There are 6 dedicated keys labelled as V, I, VAF, PF, P, E. Use these 6 keys to enter into configuration menu / change setting.

Note: The settings should be done by a professional, after going through this users manual and understood the application situation.

For the configuration setting mode

- Use ▲ + ▼ keys for 3 sec to enter or exit from the configuration menu.
- Use ◀ or ▶ keys to move cursor left or right by one digit each time.
- Use ▲ or ▼ keys for increasing or decreasing parameters value
- Use ← key to go back to previous page
- Use ↵ key to save the setting and move on to next page

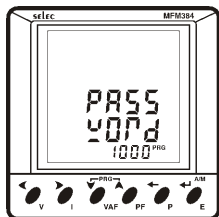


Password for entering into configuration

Default Setting: 1000

Range: 0000 to 9998

Note: Access code (Password) needed for getting into configuration menu. Only the person who knows the access code can do the parameter setting

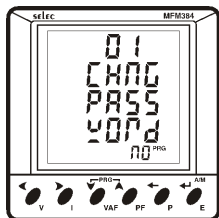


Change Password

Default Setting: No

Range: No / Yes

Note: If user want to change default password, make selection as 'Yes' and proceed. If selection is 'No' then configuration will move on to the network selection page.

Configuration

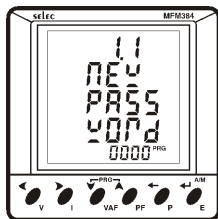


New Password

Default Setting: 0000

Range: 0000 To 9998

Note: After selecting 'Yes' on previous page, user can set new password
 Use ◀ or ▶ keys to move cursor left or right by one digit each time.
 Use ▲ or ▼ keys for increasing or decreasing parameters value

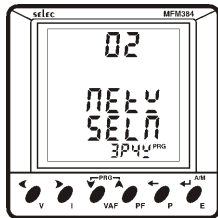


Network Selection

Default Setting: 3P4W

Range: 3P3W and 3P4W

Note: Network selection can be done as per wiring diagram given on Pg. no. 11 and selecting appropriate network selection from configuration eg. for 1 Ø 2 wire / 2 Ø 3 wire connection the network selection should be set to 3P4W and user can make the requisite hardwired connection at the terminals

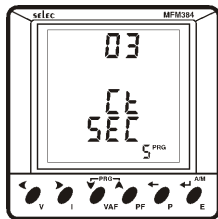


CT Secondary

Default Setting: 5 A

Range: 1A or 5A

Note: User can select from 1A and 5A as per external CT specification

Configuration

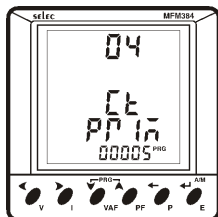


CT Primary

Default Setting: 5 A

Range: 1A, 5A to 10,000A (10.0 kA)

Note: As per CT secondary selection, CT primary will be 1A to 10000A or 5A to 10000A (Programmable for all values)

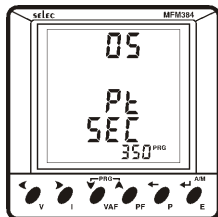


PT Secondary

Default Setting: 350V

Range: 100V to 500V

Note: User can select from 100 to 500V as per external PT specification (Programmable for all values)

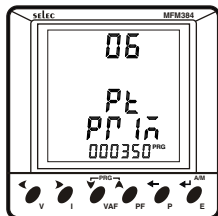


PT Primary

Default Setting: 350V

Range: 100V to 500kV

Note: User can select PT primary value as per external PT specifications (Programmable for all values)

Configuration

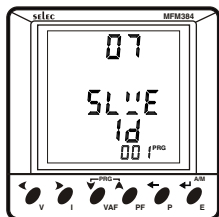


Slave ID

Default Setting : 1

Range: 1 to 255

Note: Slave Id is for communication purpose. Each meter on same RS485 network should have different address according to Modbus RTU protocol (**Optional, available in MFM384-C only**)

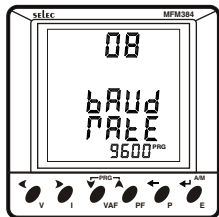


Baud Rate

Default Setting: 9600.

Range: 300, 600, 1200, 2400, 4800, 9600 & 19200

Note: The baud rate could be one of the seven, 300, 600, 1200, 2400, 4800, 9600 & 19200 (**Optional, available in MFM384-C only**)

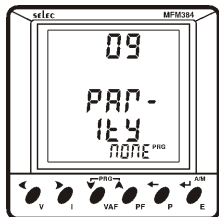


Parity

Default Setting: None

Range: None, Even, Odd

Note: For asynchronous communication, user can select any one of three None, Even, Odd (**Optional, available in MFM384-C only**)

Configuration

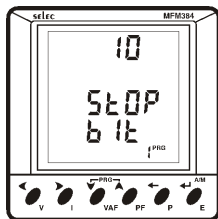


Stop Bit

Default Setting: 1

Range: 1 or 2

Note: For asynchronous communication, user can select any one of two
1 or 2

(Optional, available in MFM384-C only)

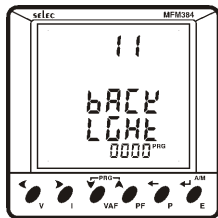


Backlight

Default Setting: 0 sec.

Range: 0 to 7200 sec.

Note: Backlight remains ON permanently if the time programmed is 0 second. User can switch OFF the backlight by entering a value within the defined range. The backlight switches OFF after the entered time elapses & automatically switches ON for the same duration of time, after key is pressed.

In MFM384, the page no. of this page will be displayed as 07

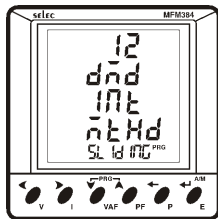

Demand Interval Method


Default Setting: Sliding

Range: Sliding / Fixed

Note: User can select demand interval from sliding or fixed window protocol
Refer user guide for the working of above protocol

In MFM384, the page no. of this page will be displayed as 08.

Configuration

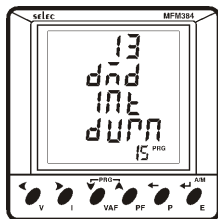


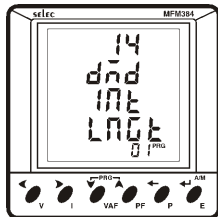
Demand Interval Duration

Default Setting: 15

Range: 1 to 30

Note: User can change demand duration as per the requirement

 In MFM384, the page no. of this page will be displayed as 09.




Demand Interval Leanght

Default Setting: 1

Range: 1 to 30 min

Note: User can change demand length as per the requirement

 In MFM384, the page no. of this page will be displayed as 10

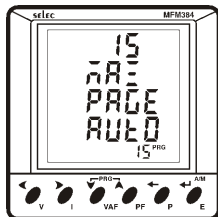

Maximum Auto Page

Default Setting: 17

Range: 1 to 17

Note: User can select maximum number of pages being displayed on the unit in auto mode.

(For MFM384 Default Setting: 14

Range: 1 to 14)

 In MFM384, the page no. of this page will be displayed as 11.

Configuration




Change Page Sequence


Default Setting: No

Range: No / Yes

Note: User can change page sequence by selecting 'Yes'

If option selected is 'No' the configuration will move to factory default page.

 In MFM384, the page no. of this page will be displayed as 12.

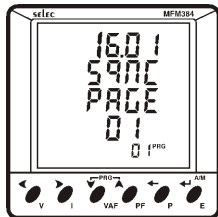


Page Sequence

Note: Page sequence depends on maximum page selection.

User will be prompted to change page sequence depending upon maximum page selection defined.

 In MFM384, the page no. of this page will be displayed as 12.01

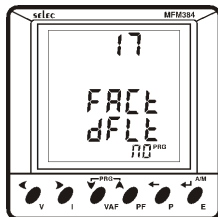

Factory Default

Default Setting: No


Range: No / Yes

Note: If 'Yes' selected unit will be formatted to factory default settings.

User should note all previous settings before formatting the unit.

 In MFM384, the page no. of this page will be displayed as 13.

Configuration

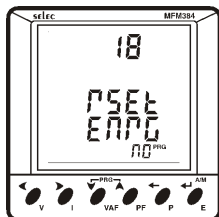


Reset


Default Setting: No

Range: No / Yes

Note: For resetting energy parameters user has to select 'Yes' option

If option selected is 'No' the configuration will move to change password

 In MFM384, the page no. of this page will be displayed as 14.

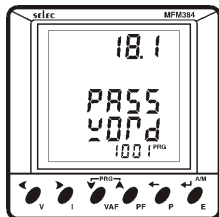


Password

Default Setting: 1001

Selection: 0000 To 9999

Note: For resetting energy parameters user will be prompted the password. If correct password is entered, the user will be able to reset all energy parameters. This password will be a value which will be greater than the configuration password by 1.

 In MFM384, the page no. of this page will be displayed as 14.1

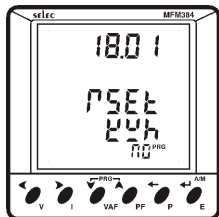

Reset Active Energy


Default Setting: No

Selection: No / Yes

Note: User can reset energy by selecting 'Yes'. User should note the reading before resetting

 In MFM384, the page no. of this page will be displayed as 14.01

Configuration

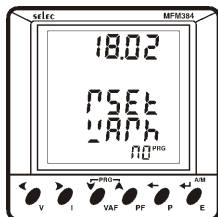


Reset Reactive Energy

Default Setting: No

Selection: No / Yes

Note: User can reset energy by selecting 'Yes'.
User should note the reading before resetting

In MFM384, the page no. of this page will be displayed as 14.02

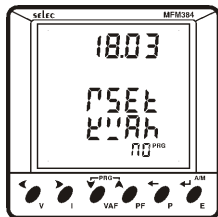

Reset Apparent Energy


Default Setting: No

Selection: No / Yes

Note: User can reset energy by selecting 'Yes'.
User should note the reading before resetting.

After pressing enter key configuration will move on to change password page.

In MFM384, the page no. of this page will be displayed as 14.03

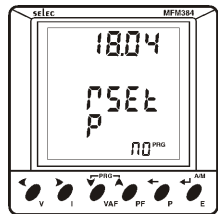

Reset Max Active Power


Default Setting: No

Selection: No / Yes

Note: User can reset max active power by selecting 'Yes'.
User should note the reading before resetting

In MFM384, the page no. of this page will be displayed as 14.04.

Configuration

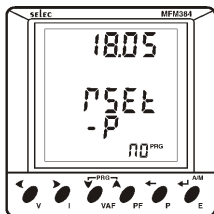

Reset Min Active Power


Default Setting: No

Selection: No / Yes

Note: User can reset min active power by selecting 'Yes'.

User should note the reading before resetting

In MFM384, the page no. of this page will be displayed as 14.05.

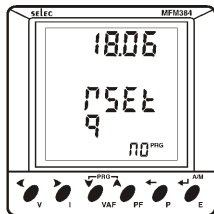

Reset Max Reactive Power


Default Setting: No

Selection: No / Yes

Note: User can reset max reactive power by selecting 'Yes'.

User should note the reading before resetting

In MFM384, the page no. of this page will be displayed as 14.06.

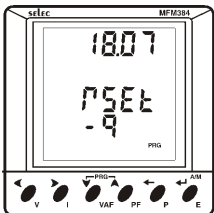

Reset Min Reactive Power

Default Setting: No

Selection: No / Yes


Note: User can reset min reactive power by selecting 'Yes'.

User should note the reading before resetting


In MFM384, the page no. of this page will be displayed as 14.07.



Configuration

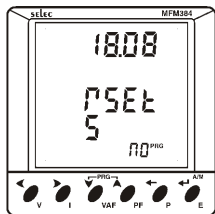**Reset Apparent Power****Default Setting :** No**Selection :** No / Yes**Note :** User can reset apparent power by selecting 'Yes'.


User should note the reading before resetting

After pressing enter key configuration will move on to change password page. In MFM384, the page no. of this page will be displayed as 14.08.

Application of Pulse Output

• Process Integration


Pulse output from MFM384 meter can be interfaced into a process through a PLC for on line control of energy content in the process. If the PLC has a self excited 24V digital input, external 24V DC supply is not needed. The kWh pulse is also used to derive average kWh information at the PLC.

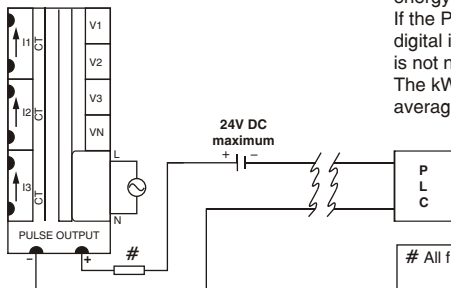

All fuse types: 0.5A class CC UL type
0.5A fast acting 600V

• Energy Controller

Pulse output from MFM384 meter can be used as alarm generator or total energy controller by interfacing it with presettable counter and control circuits (Contactors, Relay, Trip Circuit). The counter is loaded with the maximum energy consumption. When count reaches setpoint it provides output to control circuit to take appropriate action.

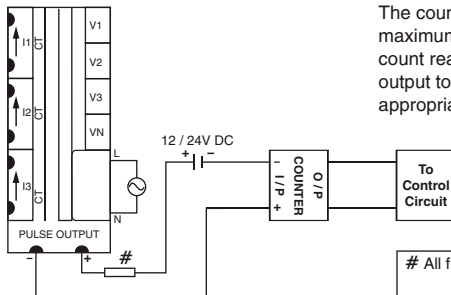

All fuse types: 0.5A class CC UL type
0.5A fast acting 600V

Description of Parameter & Symbols

1. **VOLTAGE:** True RMS value of three phase voltage, three line to line voltages and their average values are measured and displayed on MFM384.
2. **CURRENT:** True RMS value of three phase currents and their average are measured and displayed in MFM384. There is also Bar graph presentation for current in percentage form.
3. **POWER FACTOR:** Individual and average power factor displayed on MFM384
4. **ACTIVE POWER (P):** Three phase active power and system total active power are measured and displayed on MFM384.
5. **REACTIVE POWER(Q):** Three phase reactive power and total reactive power of the system are measured and displayed on MFM384.
6. **APPARENT POWER (S):** Three phase apparent power and total apparent power of the system are measured and displayed on MFM384.
7. **FREQUENCY:** The frequency of available voltage input is measured as system frequency.
8. **ENERGY (kWh, kVarh, kVAh):** Total Active, Reactive and Apparent energy of the system is measured and displayed on MFM 384.
9. **PULSE O/P:** DC pulse output is generated by the MFM384 which can be used to interface MFM384 with SCADA systems.
10. **INT** : It indicates the integration of power available in the transmission lines. It blinks once after every 5 sec.
11. **'↔'** : This symbol indicates that communication is in progress.

Description of Parameter & Symbols

12. **DMD:** This symbol indicates Maximum & minimum Demand of Power. It is demand of Active, Reactive & Apparent power. The demand statistics method in MFM384 is sliding / fixed window.
13. **Sliding Window:** In this the intervals are sliding, the unit calculates and updates the demand at the sliding speed.
14. **Fixed Window:** In this the intervals are consecutive, the unit calculates and updates the demand at the end of each interval.

17	Factory Default	No / Yes	NO
18	Reset Energy & Max Demand	No / Yes	NO
•18.1	Password	0001 To 9999	1001
18.01	Reset Active Energy	No / Yes	NO
18.02	Reset Reactive Energy	No / Yes	NO
18.03	Reset Apparent Energy	No / Yes	NO
18.04	Reset Max Active Power	No / Yes	NO
18.05	Reset Min Active Power	No / Yes	NO
18.06	Reset Max Reactive Power	No / Yes	NO
18.07	Reset Min Reactive Power	No / Yes	NO
18.08	Reset Max Apparent Power	No / Yes	NO

- * Marked parameters are available only in MFM384-C / MFM384-C-230V
- For resetting energy parameters user will be prompted for password. If correct password is entered, the user will be able to reset all energy parameters. This password will be value which will be greater than the configuration password by 1.